

RBT IV Printer Instructions

	Step 1	Step 2	Step 3	Step 4	Step 5	Comments
Set Date and Time	Press ON button	Press SET button	Enter correct date using 0 – 9 buttons of keypad.	Enter correct time in 24 hour format using 0 – 9 buttons.	Press TIME button to save new date and time.	Note: When change date menu is accessed, the date and time must be entered even if correct on the display. Note the position of cursor for correct entry of numbers. Do not press ENTER button after entering date and time.
Erase Memory without saving to computer	Turn instrument off.	While holding LAST TEST button down, press ON button	When printer displays “DUMPING MEMORY” release ON button	When printer displays “ERASE MEMORY Y/N?” Press and hold YES button for three seconds		RBT IV re-sets test numbers to #1.
Dump Memory to computer	Connect RBT printer cable to computer serial port using special null modem adapter accessory.	Start computer terminal emulation program to receive ascii file transfer from RBT printer.	Turn instrument off.	While holding LAST TEST button down, press ON button	When printer displays “DUMPING MEMORY” release ON button	When printer displays “ERASE MEMORY Y/N?” Press and hold YES button for three seconds to erase memory, or press NO button to retain memory.